


Title:	Dooya Screen Remote Programming Quick Sheet	Document No.: TR-W-002
Author:	Paul Wade	Revision - Date: 0 -06/11/2024

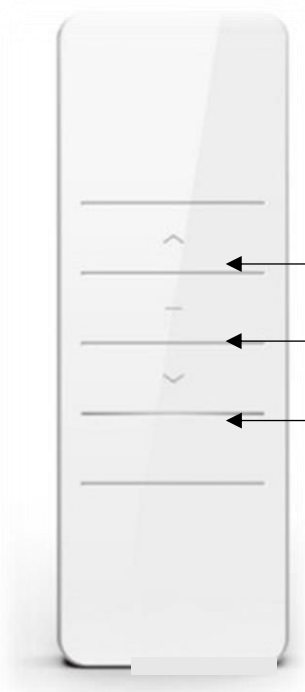


DD2700H Remote – Single Channel

Up Button
Stop Button
Down Button



P2 Button

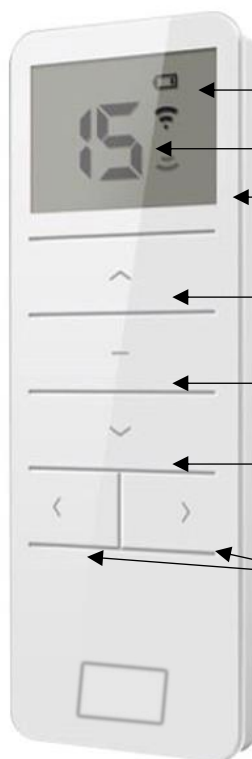

DD2702H Remote - 15 Channel

Battery Indicator
Channel Number
LCD Screen
Up Button
Stop Button
Down Button
Channel Buttons

Quick Index

	Settings	Steps
1	Pairing	Stop (Hold 2s)
2	Switch Rotation	▲ + ▼ (Hold 2s)
3	Set Upper Limit	▲ + Stop (2s)
4	Set Lower Limit	▼ + Stop (2s)
5	Adj Upper Limit	▲ + Stop(5s), Adj up or down, ▲ + Stop (2s)
6	Adj Lower Limit	▼ + Stop(5s), Adj up or down, ▼ + Stop (2s)
7	Pair 2 nd Remote	P2(a) → P2(a) → P2(b)
8	Remove All Remotes	P2 → Stop → P2
9	Delete All Limits	P2 → ▼ → P2
10	Lower Limit Return	P2 → Stop → Down
11	Setting # of Channels (DD2702H Only)	◀ + ▶ (2s) □ will appear, ◀ or ▶ to desired # of channels → press and hold Stop
12	Motor Mode Switch	P2 → ▲ → ▲

- (a) – Remote 1
(b) – Remote 2

Motor Programming: Note: Timing is key with Dooya motors. If multiple motors, power and program ONLY one motor at a time. Each button is to be pressed in one second intervals. Pressing either too fast or too slowly will void the programming process.