

Side Screen Installation

Tools Needed:


Drill

1/4 inch drill bit for metal
3/16th S Hook (included)


Pliers

How it should look



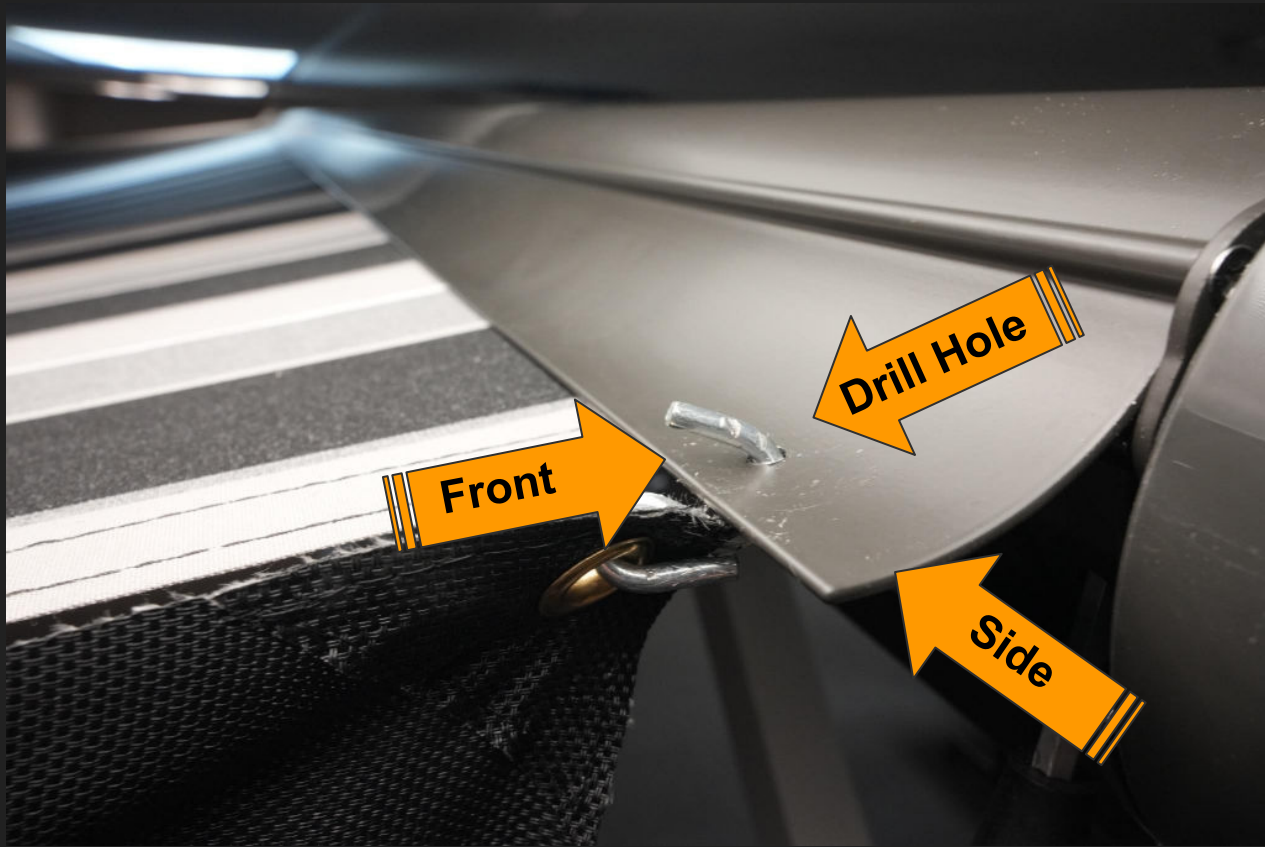

Drill $\frac{1}{4}$ inch hole $1 \frac{3}{4}$ inches from side x $\frac{1}{2}$ inch from front

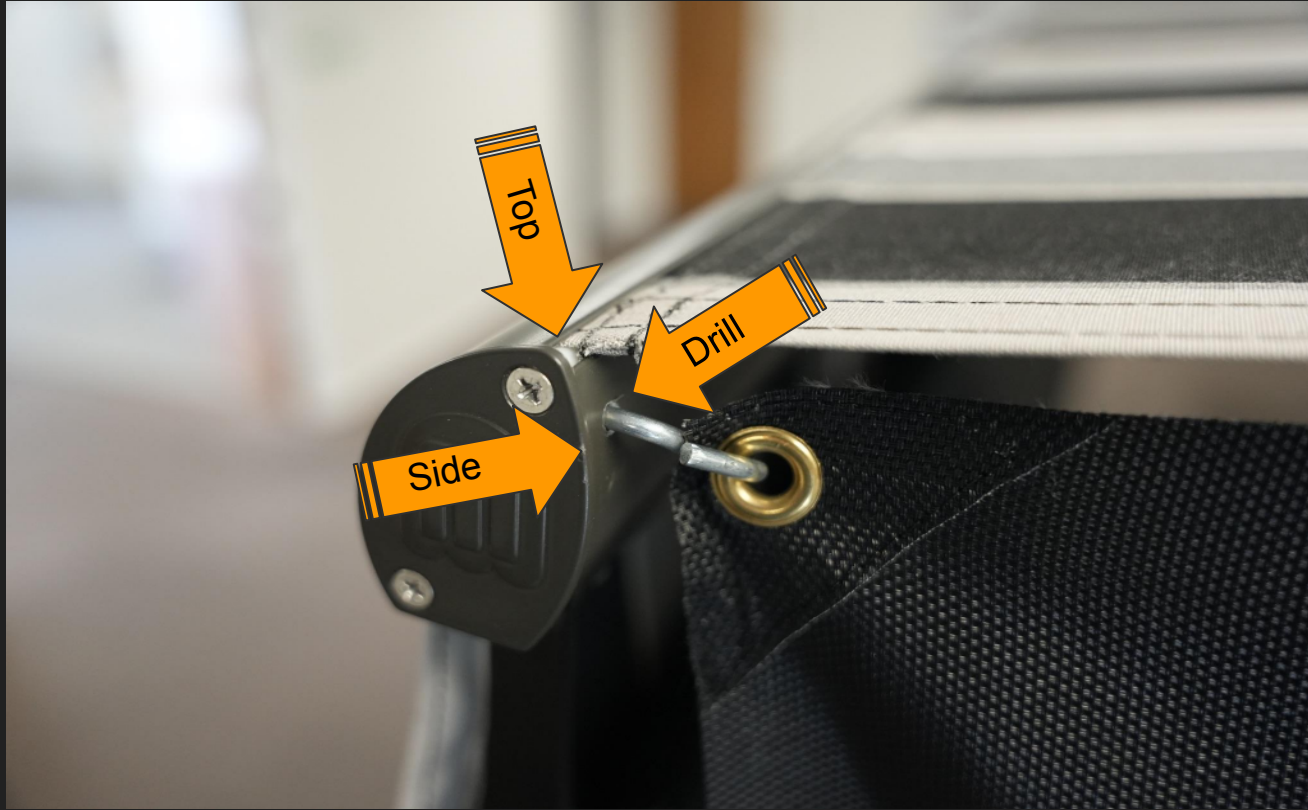

Drill $\frac{1}{4}$ inch hole $\frac{1}{2}$ inch from side x $\frac{1}{2}$ inch from top



Insert S-Hook and pinch closed with pliers

