




# IMPORTANT REMINDER



**\*\*PLEASE ENSURE YOU ARE INSTALLING THE ARM STOPS  
CORRECTLY ON THE AWNING VALANCE BAR\*\***

**WE RECOMMEND THE ARM STOPS (CIRCLED IN RED) TO BE  
INSTALLED APPROX. 8-10" IN FROM THE ELBOW OF THE ARMS  
(CIRCLED IN GREEN) WHEN FULLY CLOSED**

**ARM GUIDE NUTS ARE  
INCLUDED PRE-INSTALLED  
IN THE VALANCE BAR**

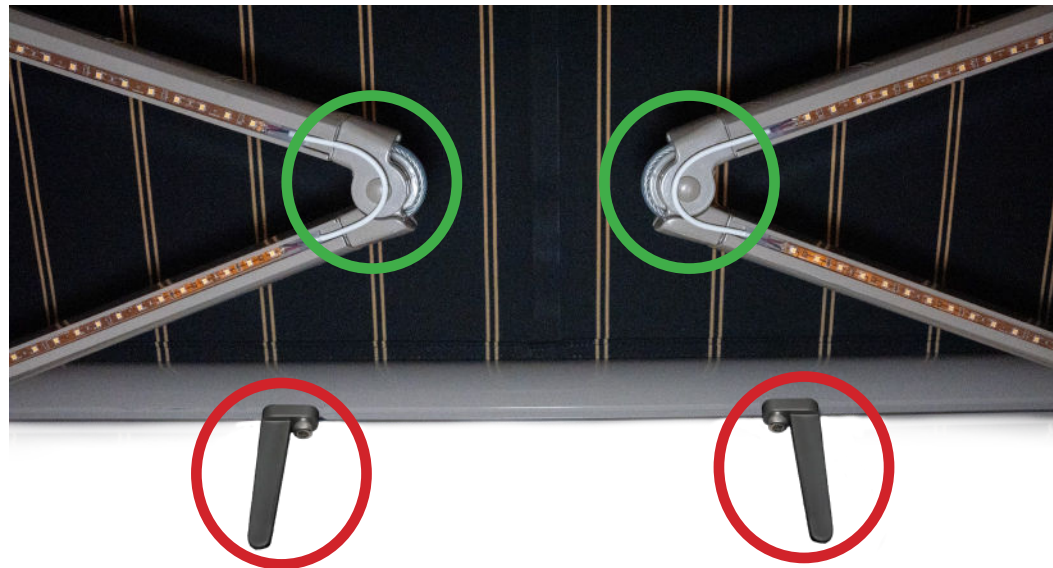

**6MM ALLEN WRENCH  
IS REQUIRED**