


# Awning Arm Replacement Instructions



## Tools Needed:

Safety arm strap

13mm Wrench or Socket.

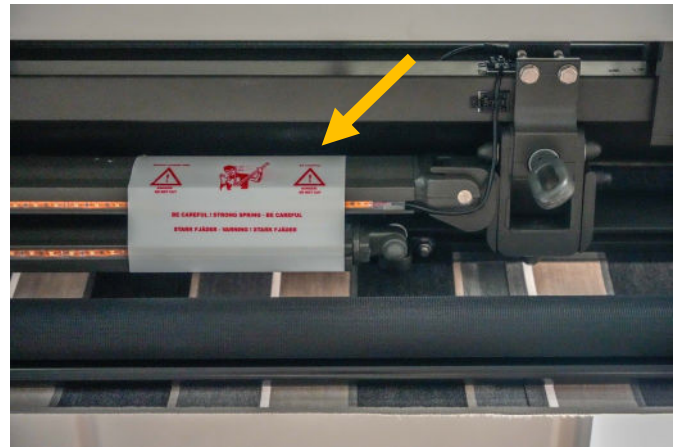


Secure the arm with an arm strap or suitable replacement, such as duct tape, to prevent arm from opening and hold in its closed position.

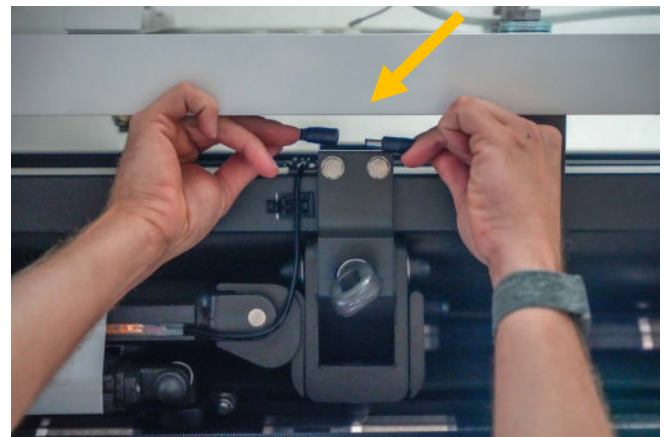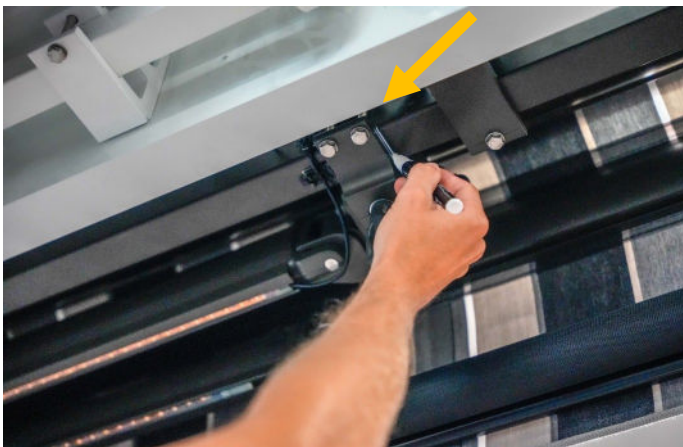


Mark the valance bar and awning valance, where existing arm is attached to ensure installation of new arm is in exact location. Disconnect LED Connector at the shoulder / mounting bar.

# Awning Arm Replacement Instructions (Cont.)

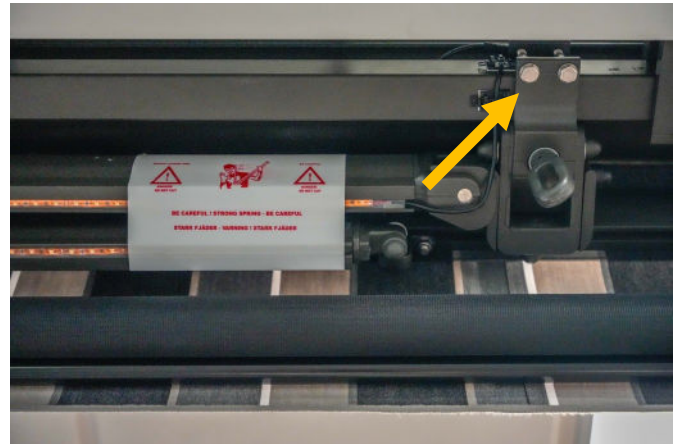

With the help of an assistant to hold the valance bar, use a 13 mm wrench to remove the two valance end bolts FIRST, then the shoulder bolts attached to frame. Awning Arm can then be removed for replacement.

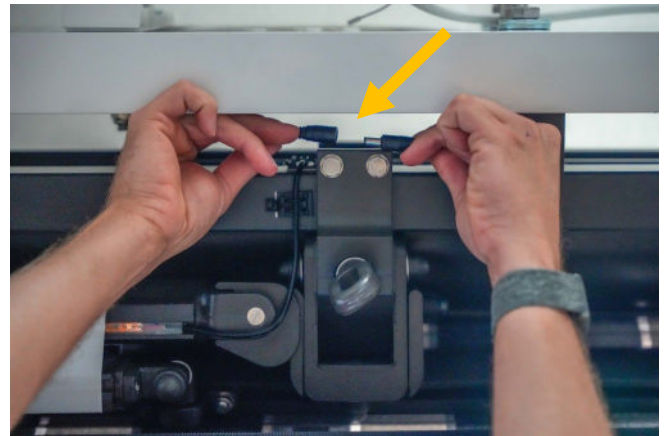

Mount new awning arm at previously marked location and reinstall bolts. Once you have finished installation of the new arm you can then plug lights back into the DC jack.